


Instruction For Use of the A/L Adaptor

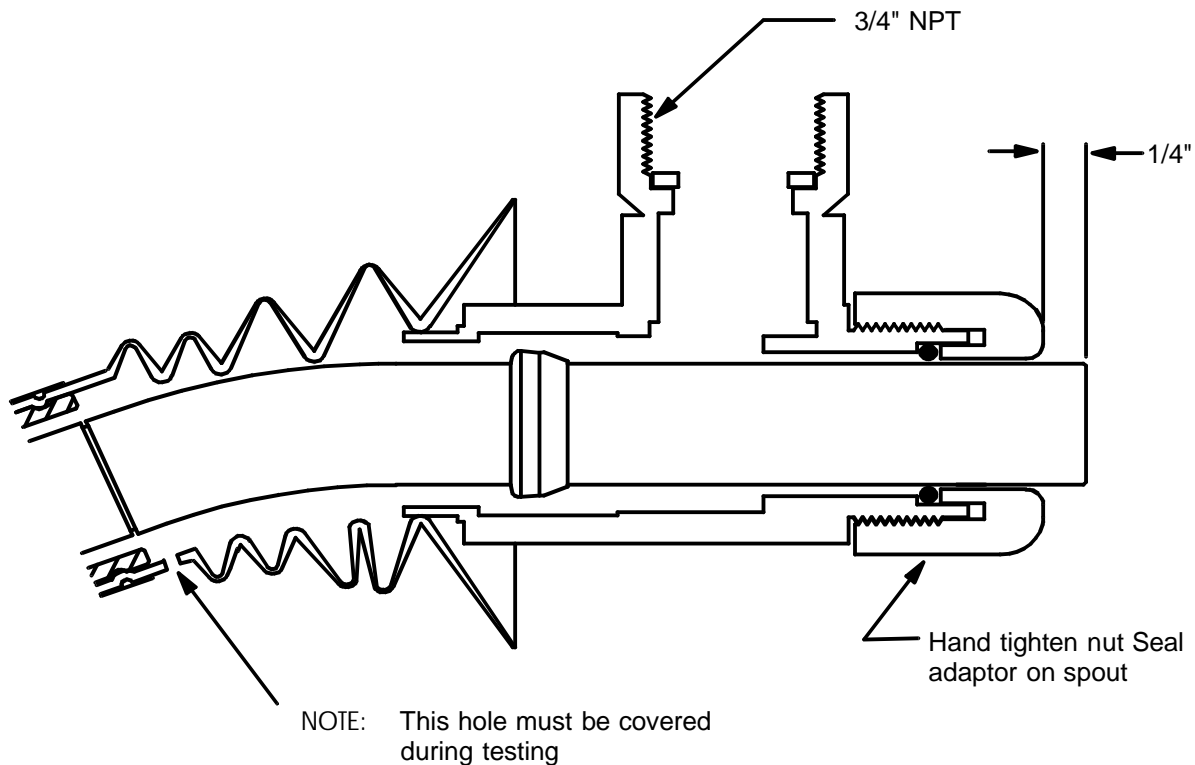

Instructions for use of the 4360 A/L Adaptor

- 1) Inspect the Vapor Splash Guard (VSG) and spout for damage. Any tears or extra holes in the VSG will reduce the accuracy of the test.
- 2) Slide the A/L adaptor over the spout such that 1/4" of the spout is exposed past the nut.
- 3) Hand tighten the nut. This will seal the A/L adaptor to the spout.
- 4) Pull the VSG up over the smallest step on the A/L adaptor. This will seal the VSG to the adaptor.
- 5) Using a piece of tape, seal the 1/8" hole in the cuff of the VSG.